

TURNING ON/OFF THE PROJECTOR

- 1) Use the NEC remote power or standby button.
- 2) Source should be left on HDMI 1 all the time.
- 3) ALL inputs to the projector are controlled by the AV Selector in the white cabinet screen.
- 4) Use the mixer in the white cabinet to control the volume (not the buttons on the remote).



VOLUME CONTROL

Switch on power amp at the bottom of the rack
& turn up left & right channels.



HDMI (1,2,3), Freeview (6), 3.5mm jack

AV SELECTOR

(output connected to HDMI 1 on projector)



Left to right

- 1) HDMI trailing lead
- 2) DVD player
- 3) HDMI counter top
- 4) VGA counter top
- 6) Freeview

SOUND ISSUES?

This is a stereo system. The audio is extracted from the HDMI signal. If the setting on the extraction box has been changed from stereo to 5.1 you will get strange audio playback.

To change back to stereo push the "select" button on the audio extraction box



select
button

CONNECTING A LAPTOP via counter top box



- Plug the HDMI lead or VGA lead into the laptop (mac & HDMI adapters available from reception).
- Plug the 3.5mm jack into the headphone socket on the laptop (if using VGA)
- Press button 4 for VGA or button 3 for HDMI

FREEVIEW

- Press button 6 on the selector
- Use Manhattan remote control to operate Freeview box

DVD/BLURAY

- Press DVD button (2) on the selector
- Use Yamaha remote control to operate DVD player